

# TMEIC

## blue'Log Driver

### DESCRIPTION OF FUNCTIONS

Driver: blue'Log driver for supporting TMEIC inverters.

### COMMUNICATION

Max. number of inverters:	blue'Log X-1000	blue'Log X-3000	blue'Log X-6000
	50	100	100
Communication interface:	Ethernet		
Protocol (transmission):	TCP		

### POWER CONTROL

Active power control:	No
Reactive power control:	No

### MEASUREMENT VALUES RECORDED

COS_PHI	cos $\phi$
E_TOTAL	Total energy
F_AC	Grid frequency
I_AC (phase 1, 2, 3)	AC current (phase 1, 2, 3)
I_DC	DC current
P_AC	AC active power
P_DC	DC power
U_AC_L1L2	Phase to phase voltage L1-L2
U_AC_L2L3	Phase to phase voltage L2-L3
U_AC_L3L1	Phase to phase voltage L3-L1
U_DC	DC voltage

---

*SUPPORTED INVERTERS*

SOLAR WARE Samurai Serie:	PVL-L0833 GR	PVL-L1833 GRQ	PVL-L1833 GRM
SOLAR WARE Serie:	PVL-T0100 UR-208/480	PVG-L0250	PVL-L0500
	PVL-L0500E	PVL-L0630	PVL-L0630E
	PVL-L0665E	PVL-L0750E	

Please contact Sales for details of compatibility with inverters not listed.  
Telephone +49 (0)821 34666 - 80  
E-Mail [sales@meteocontrol.com](mailto:sales@meteocontrol.com)

---

meteocontrol GmbH | Spicherer Straße 48 | 86157 Augsburg | Germany | phone +49 (0)821 34666 - 0 | fax +49 (0)821 34666 - 11  
email [info@meteocontrol.com](mailto:info@meteocontrol.com) | web [www.meteocontrol.com](http://www.meteocontrol.com)