

## PT1000 SENSOR IN **ENCLOSURE** Item No.: 423.210



## DESCRIPTION OF FUNCTION

The sensor measures the ambient temperature using a PT1000 measuring resistance. The sensor can be connected directly to an analog input of every meteocontrol data logger. The logger must be configured for resistance measurement.

## TECHNICAL DATA

PT1000 sensor in enclosure Operating temperature: Protection class: Dimensions (W x H x D): Dimensions incl. mounting bracket cover (W x H x D Sensor type: Connection terminal: Cable entry: Enclosure:

-35 ... 90 °C IP65 according to EN 60529 57 mm x 69.5 mm x 40 mm

68 mm x 69.5 mm x 40 mm PT1000 Removable plug-in terminal, max. 2.5 mm<sup>2</sup> M16 for wire max.  $\emptyset = 3 \dots 7$  mm, removable Enclosure USE-S, PC, pure white

Electrical resistance, DIN EN 60751

-35 ... 90 °C

Ambient temperature

< 1 mA

## TEMPERATURE MEASUREMENT

Output signal: Measuring range: Current consumption: Accuracy:

typ. ±0.3 K (typ. at 21 °C)

MEASUREMENT VALUES RECORDED T\_Ux\*

PARTICULARITIES \*Abbreviation

x is a placeholder for a consecutive number. If more than one sensor of a given type is installed, the numbering starts with 1. Otherwise, 0 is used.

meteocontrol GmbH | Spicherer Straße 48 | 86157 Augsburg | Germany | Telephone +49 (0)821 34666 - 0 | Fax +49 (0)821 34666 - 11 E-Mail info@meteocontrol.de | Web www.meteocontrol.com