

# MX-MODULE RS485/422

## Quick Start Guide

Version 20160202



meteocontrol GmbH | Spicherer Straße 48 | D-86157 Augsburg | fon +49 (0)821 34666 - 88 (Support)  
fax +49 (0)821 34666 - 11 | email [info@meteocontrol.com](mailto:info@meteocontrol.com) | web [www.meteocontrol.com](http://www.meteocontrol.com)

Text and illustrations represent state-of-the-art technology at the time of printing • Subject to technical modifications • No liability for printing errors.  
Item number 832057 • Version 20160202

### 1

## DEVICE OVERVIEW




- ① LED: Power Status
- ② LED: Device Status
- ③ LED: Bus-2 Connection
- ④ LED: Bus-1 Connection
- ⑤ Connector for blue'Log expansion
- ⑥ Interface for RS485/422 - 1
- ⑦ Interface for RS485/422 - 2
- ⑧ Case lock

### 2

## CONNECTION ORDER

When connecting MX-Modules to the blue'Log X basis device, the following order needs to be considered:

- The number of lines (incl. line with arrow) at the bottom of the front panel of the blue'Log as well as the MX-Modules indicates the order of connection.
- When installing various MX-Modules, they must be connected from left to right sorted by the ascending number of lines (incl. line with arrow). Following illustration describes the correct procedure.

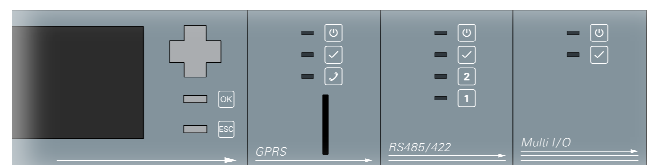

## WARNING

### Order of expansion modules


When connecting the MX-Modules in a wrong order, errors might occur and correct function can no longer be ensured.

## PREPERATION

- Remove the upper and lower cap from your blue'Log X basis device.
- Disconnect your blue'Log X basis device from the power supply.
- Remove the cap on the right side of the case from your blue'Log X basis device according to the manual.


## INSTALLATION

The blue'Log X basis device ① is expanded by the MX-Module RS485/422 ② with two additional interfaces ③ and ④.

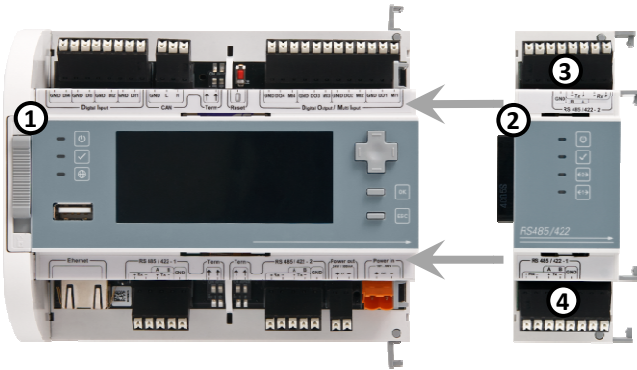

- ① blue'Log X basis device
- ② MX-Module RS485/422
- ③ RS485/422 interface – 2
- ④ RS485/422 interface – 1


- Connect the MX-Module RS485/422 ②\* to the blue'Log X basis device ①\*, until no visible gap remains. Check for secure fit.
- Interlock both modules (①\* and ②\*) by closing the previously opened case locks.
- Reattach the previously removed side cap to the right side of the expansion module and fasten it by closing the case locks.

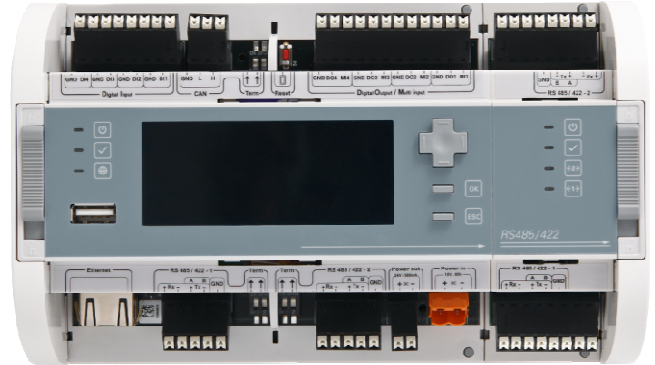

\*Refer to point 3













## PIN ASSIGNMENT

The following pin assignment can be applied to both (top and bottom) RS485/422 interfaces (③\* and ④\*).

		
Pin	RS485	RS422
1	---	RX+
2	---	RX-
3	RS485 A (+)	TX+
4	RS485 B (-)	TX-
5	GND	GND
6, 7, 8	---	---

\*Refer to point 3

## STATUS-LEDS

Symbol	LED	Explanation
		Green on: Module supplied with power
		Off: Error in power supply
		Green on: Standard mode: Module recognized
		Off: Error: Module not recognized
		Blinking orange: Data transfer interface 2 active
		Steady orange light: Error on interface 2
		Blinking orange: Data transfer interface 1 active
		Steady orange light: Error on interface 1